

# Table of Contents

---

## Chapter 1: Getting Started

<b>Introduction</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Supplemental IManuals .....	1-2
Technical Support .....	1-2
<b>Conventions Used</b> .....	<b>1-3</b>
Key Topics for Each Chapter .....	1-3
<b>Physical Characteristics</b> .....	<b>1-3</b>
<b>Analog Input Module Terminology</b> .....	<b>1-4</b>
Channels per Module .....	1-4
Input Ranges .....	1-4
Resolution .....	1-4
Input Type .....	1-4
Input Impedance .....	1-4
Conversion Method .....	1-4
PLC Update Rate .....	1-4
Linearity Error .....	1-4
Maximum Inaccuracy .....	1-4
Accuracy vs. Temperature .....	1-4
I/O Points Required .....	1-4
External Power Source .....	1-4
Base Power Required .....	1-4
Operating Temperature .....	1-4
Relative Humidity .....	1-4
Step Response .....	1-4
<b>Analog Output Module Terminology</b> .....	<b>1-5</b>
Channels per Module .....	1-5
Output Ranges .....	1-5
Resolution .....	1-5
Output Current .....	1-5
Output Impedance .....	1-5
Load Impedance .....	1-5
PLC Update Rate .....	1-5
Linearity Error .....	1-5
Maximum Inaccuracy .....	1-5
Accuracy vs. Temperature .....	1-5
External Power Source .....	1-5
Base Power Required .....	1-5
Operating Temperature .....	1-5
RelativeHumidity .....	1-5
I/O Points Required .....	1-5
<b>Selecting the Appropriate Module</b> .....	<b>1-6</b>
Wide Variety of Modules .....	1-6
Diagnostic Features .....	1-6

---

Analog Input .....	1-7
Special Input .....	1-7
Analog Output .....	1-8
Combination Analog .....	1-8
<b>Analog Made Easy - Four Simple Steps .....</b>	<b>1-9</b>

## **Chapter 2: F2-04AD-1, F2-04AD-1L 4-Channel Analog Current Input**

<b>Module Specifications .....</b>	<b>2-2</b>
Input Specifications .....	2-3
General Specifications .....	2-3
Analog Input Configuration Requirements .....	2-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	2-4
<b>Setting the Module Jumpers .....</b>	<b>2-5</b>
Selecting the Number of Channels .....	2-5
<b>Connecting the Field Wiring .....</b>	<b>2-5</b>
Wiring Guidelines .....	2-5
User Power Supply Requirements .....	2-5
Current Loop Transmitter Impedance .....	2-6
Wiring Diagram .....	2-7
<b>Module Operation .....</b>	<b>2-8</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	2-8
Channel Scanning Sequence for a DL240, DL250-1 or or DL260 CPU (Pointer Method) .....	2-9
Analog Module Updates .....	2-9
Understanding the Input Assignments .....	2-10
Analog Data Bits .....	2-10
Active Channel Indicator Inputs .....	2-11
Module Diagnostic Inputs .....	2-11
Module Resolution .....	2-11
<b>Writing the Control Program .....</b>	<b>2-12</b>
Reading Values: Pointer Method and Multiplexing .....	2-12
Pointer Method .....	2-12
Reading Values (Multiplexing) .....	2-14
Single Channel Selected .....	2-15
Analog Power Failure Detection .....	2-15
Scaling the Input Data .....	2-15
Analog and Digital Value Conversions .....	2-16
Filtering Input Noise (DL250-1, DL260 CPU Only) .....	2-17

## **Chapter 3: F2-04AD-2, F2-04AD-2L 4-Channel Analog Voltage Input**

<b>Module Specifications .....</b>	<b>3-2</b>
Input Specifications .....	3-3
General Specifications .....	3-3
Analog Input Configuration Requirements .....	3-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	3-4
<b>Setting the Module Jumpers .....</b>	<b>3-5</b>

Selecting the Number of Channels .....	3-5
Selecting the Input Signal Range .....	3-5
<b>Connecting the Field Wiring .....</b>	<b>3-6</b>
Wiring .....	3-6
Guidelines .....	3-6
User Power Supply Requirements .....	3-6
Custom Input Ranges .....	3-7
Wiring Diagram .....	3-8
<b>Module Operation .....</b>	<b>3-9</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	3-9
Channel Scanning Sequence with a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	3-10
Analog Module Updates .....	3-10
Understanding the Input Assignments .....	3-11
Analog Data Bits .....	3-11
Active Channel Indicator Inputs .....	3-11
Module Diagnostic and Sign Inputs .....	3-12
Module Resolution .....	3-12
<b>Writing the Control Program .....</b>	<b>3-13</b>
Reading Values: Pointer Method and Multiplexing .....	3-13
Pointer Method .....	3-13
Using Bipolar Ranges (Pointer Method) .....	3-15
Reading Values (Multiplexing) .....	3-16
Single Channel Selected .....	3-17
Using Bipolar Ranges (Multiplexing) .....	3-17
Using 2's Complement (Multiplexing) .....	3-18
Analog Power Failure Detection .....	3-19
Scaling the Input Data .....	3-19
Analog and Digital Value Conversions .....	3-20
Filtering Input Noise (DL250-1, DL260 CPUs Only) .....	3-21

## Chapter 4: F2-08AD-1 8-Channel Analog Current Input

<b>Module Specifications .....</b>	<b>4-2</b>
Input Specifications .....	4-3
General Specifications .....	4-3
Analog Input Configuration Requirements .....	4-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	4-4
<b>Setting the Module Jumpers .....</b>	<b>4-5</b>
Selecting the Number of Channels .....	4-5
<b>Connecting the Field Wiring .....</b>	<b>4-6</b>
Wiring Guidelines .....	4-6
User Power Supply Requirements .....	4-6
Current Loop Transmitter Impedance .....	4-6
Wiring Diagram .....	4-7
<b>Module Operation .....</b>	<b>4-8</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	4-8
Channel Scanning Sequence with a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	4-9
Analog Module Updates .....	4-9
Understanding the Input Assignments .....	4-10
Analog Data Bits .....	4-10
Active Channel Indicator Inputs .....	4-11

Module Diagnostic Inputs .....	4-11
Module Resolution .....	4-11
<b>Writing the Control Program .....</b>	<b>4-12</b>
Reading Values: Pointer Method and Multiplexing .....	4-12
Pointer Method .....	4-12
Reading Values Multiplexing .....	4-14
Single Channel Selected .....	4-15
Analog Power Failure Detection .....	4-15
Scaling the Input Data .....	4-15
Analog and Digital Value Conversions .....	4-16
Filtering Input Noise (DL250-1, DL260 CPU Only) .....	4-17
 <b>Chapter 5: F2-08AD-2 8-Channel Analog Voltage Input</b>	
<b>Module Specifications .....</b>	<b>5-2</b>
Input Specifications .....	5-3
General Specifications .....	5-3
Analog Input Configuration Requirements .....	5-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	5-4
<b>Setting the Module Jumpers .....</b>	<b>5-5</b>
Selecting the Number of Channels .....	5-5
Selecting Input Voltage Range .....	5-5
<b>Connecting the Field Wiring .....</b>	<b>5-6</b>
Wiring Guidelines .....	5-6
User Power Supply Requirements .....	5-6
Wiring Diagram .....	5-7
<b>Module Operation .....</b>	<b>5-8</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	5-8
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	5-8
Analog Module Updates .....	5-9
Understanding the Input Assignments .....	5-9
Analog Data Bits .....	5-9
Active Channel Indicator Inputs .....	5-10
Module Diagnostic and Sign .....	5-10
Module Resolution .....	5-10
<b>Writing the Control Program .....</b>	<b>5-11</b>
Reading Values: Pointer Method and Multiplexing .....	5-11
Pointer Method .....	5-11
Using Bipolar Ranges (Pointer Method) .....	5-13
Reading Values (Multiplexing) .....	5-14
Single Channel Selected .....	5-14
Using Bipolar Ranges (Multiplexing) .....	5-15
Using 2's Complement (Multiplexing) .....	5-16
Analog Power Failure Detection .....	5-17
Scaling the Input Data .....	5-17
Analog and Digital Value Conversions .....	5-18
Filtering Input Noise (DL250-1, DL260 CPUs Only) .....	5-19

## Chapter 6: F2-04RTD 4-Channel RTD Input

<b>Module Specifications .....</b>	<b>6-2</b>
------------------------------------	------------

Module Calibration .....	6-2
RTD Input Configuration Requirements .....	6-2
Input Specifications .....	6-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	6-4
<b>Setting the Module Jumpers .....</b>	<b>6-5</b>
Jumper Locations .....	6-5
Selecting the Number of Channels .....	6-5
Setting Input Type .....	6-5
Selecting the Conversion Units .....	6-6
<b>Connecting the Field Wiring .....</b>	<b>6-7</b>
Wiring Guidelines .....	6-7
RTD - Resistance Temperature Detector .....	6-7
Ambient Variations in Temperature .....	6-7
Wiring Diagram .....	6-8
<b>Module Operation .....</b>	<b>6-9</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	6-9
Channel Scanning Sequence for a DL240, DL250-1 or or DL260 CPU (Pointer Method) ...	6-10
Analog Module Updates .....	6-10
<b>Writing the Control Program .....</b>	<b>6-11</b>
Reading Values: Pointer Method and Multiplexing .....	6-11
Pointer Method .....	6-11
Negative Temperature Readings with Magnitude Plus Sign (Pointer Method) .....	6-13
Negative Temperatures 2's Complement (Binary / Pointer Method) .....	6-15
Understanding the Input Assignments (Multiplexing Ladder Only) .....	6-15
Analog Data Bits .....	6-16
Active Channel Bits .....	6-16
BrokenTransmitter Bits (Pointer and Multiplexing Ladder Methods) .....	6-16
Reading Magnitude Plus Sign Values (Multiplexing) .....	6-17
Reading 2's Complement Values (Multiplexing) .....	6-18
Scaling the Input Data .....	6-18
Filtering Input Noise (DL250-1, DL260 CPUs Only) .....	6-19
 <b>Chapter 7: F2-04THM 4-Channel Thermocouple Input</b>	
<b>Module Specifications .....</b>	<b>7-2</b>
General Specifications .....	7-2
Thermocouple Specifications .....	7-3
Voltage Specifications .....	7-3
Module Calibration .....	7-3
Thermocouple Input Configuration Requirements .....	7-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	7-4
<b>Setting the Module Jumpers .....</b>	<b>7-5</b>
Jumper Locations .....	7-5
Calibrate Enable .....	7-5
Selecting the Number of Channels .....	7-6
Setting Input Type .....	7-6
Selecting the Conversion Units .....	7-7
Thermocouple Conversion Units .....	7-7
Voltage Conversion Units .....	7-7
<b>Connecting the Field Wiring .....</b>	<b>7-8</b>
Wiring Guidelines .....	7-8

User Power Supply Requirements .....	7-8
Thermocouples .....	7-9
Ambient Variations in Temperature .....	7-9
Wiring Diagram .....	7-9
<b>Module Operation .....</b>	<b>7-11</b>
Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	7-11
Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	7-12
Analog Module Updates .....	7-12
<b>Writing the Control Program .....</b>	<b>7-13</b>
Reading Values: Pointer Method and Multiplexing .....	7-13
Pointer Method .....	7-13
Negative Temperature Readings with Magnitude Plus Sign (Pointer Method) .....	7-15
Negative Temperatures 2's Complement (Binary / Pointer Method) .....	7-17
Understanding the Input Assignments (Multiplexing Ladder Only) .....	7-17
Analog Data Bits .....	7-18
Active Channel Bits .....	7-18
Broken Transmitter Bits (Pointer and Multiplexing Ladder Methods) .....	7-18
Reading Magnitude Plus Sign Values (Multiplexing) .....	7-19
Reading 2's Complement Values (Multiplexing) .....	7-20
Scaling the Input Data .....	7-20
Module Resolution 16-Bit (Unipolar Voltage Input) .....	7-21
Module Resolution 15-Bit Plus Sign (Bipolar Voltage Input) .....	7-21
Analog and Digital Value Conversions .....	7-22
Filtering Input Noise (DL250-1, DL260 CPUs Only) .....	7-23

## Chapter 8: F2-02DA-1, F2-02DA-1L 2-Channel Analog Current Output

<b>Module Specifications .....</b>	<b>8-2</b>
Output Specifications .....	8-3
General Specifications .....	8-3
Analog Output Configuration Requirements .....	8-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	8-4
<b>Connecting the Field Wiring .....</b>	<b>8-5</b>
Wiring Guidelines .....	8-5
User Power Supply Requirements .....	8-5
Wiring Diagram .....	8-6
Load Range .....	8-6
<b>Module Operation .....</b>	<b>8-7</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	8-7
Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	8-8
Understanding the Output Assignments .....	8-9
Channel Select .....	8-9
Outputs .....	8-9
Analog Data Bits .....	8-10
Module Resolution .....	8-10
<b>Writing the Control Program .....</b>	<b>8-11</b>
Reading Values: Pointer Method and Multiplexing .....	8-11
Pointer Method .....	8-11
Writing Data (Multiplexing) .....	8-13
Sending Data to One Channel .....	8-14

Sending the Same Data to Both Channels .....	8-14
Calculating the Digital Value .....	8-15
Analog and Digital Value Conversions .....	8-15

## Chapter 9: F2-02DA-2, F2-02DA-2L 2-Channel Analog Voltage Output

<b>Module Specifications</b> .....	<b>9-2</b>
Output Specifications .....	9-3
General Specifications .....	9-3
Analog Output Configuration Requirements .....	9-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	9-4
<b>Setting the Module Jumpers</b> .....	<b>9-5</b>
Voltage Range and Output Combinations .....	9-6
<b>Connecting the Field Wiring</b> .....	<b>9-8</b>
Wiring Guidelines .....	9-8
User Power .....	9-8
Supply Requirements .....	9-8
Wiring Diagram .....	9-8
<b>Module Operation</b> .....	<b>9-9</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	9-9
Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	9-10
Understanding .....	9-11
the Output Assignments .....	9-11
Channel Select Outputs .....	9-11
Analog Data Bits .....	9-12
Signal Sign Output .....	9-12
Bipolar Output Data .....	9-12
Module Resolution .....	9-13
<b>Writing the Control Program</b> .....	<b>9-14</b>
Calculating the Digital Value .....	9-14
Negative Values with Bipolar Range .....	9-15
Writing Values: Pointer Method and Multiplexing .....	9-16
Writing Values (Pointer Method) .....	9-16
Writing Data (Multiplexing) .....	9-18
Sending Data to One Channel .....	9-20
Sending the Same Data to Both Channels .....	9-20
Analog and Digital Value Conversions .....	9-21

## Chapter 10: F2-08DA-1 8-Channel Analog Current Output

<b>Module Specifications</b> .....	<b>10-2</b>
Output Specifications .....	10-3
General Specifications .....	10-3
Analog Output Configuration Requirements .....	10-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	10-4
<b>Connecting the Field Wiring</b> .....	<b>10-5</b>
Wiring Guidelines .....	10-5
User Power .....	10-5
Supply Requirements .....	10-5
Wiring Diagram .....	10-6

Load Range .....	10-6
<b>Module Operation .....</b>	<b>10-7</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	10-7
Channel Update Sequence with a DL240, DL250-1 or DL260 CPU (Pointer) .....	10-8
Understanding .....	10-8
the Output Assignments .....	10-8
Channel Select Outputs .....	10-9
Analog Data Bits .....	10-10
Output Enable .....	10-10
Module Resolution .....	10-10
<b>Writing the Control Program .....</b>	<b>10-11</b>
Calculating the Digital Value .....	10-11
Writing Values: Pointer Method and Multiplexing .....	10-12
Pointer Method Example .....	10-12
Writing Data (Multiplexing) .....	10-14
Writing Data (Multiplexing Example) Continued .....	10-15
Sending Data to One Channel .....	10-16
Analog and Digital Value Conversions .....	10-16
 <b>Chapter 11: F2-08DA-2 8-Channel Analog Voltage Output</b>	
<b>Module Specifications .....</b>	<b>11-2</b>
Output Specifications .....	11-3
General Specifications .....	11-3
Analog Output Configuration Requirements .....	11-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	11-4
<b>Setting the Module Jumper .....</b>	<b>11-5</b>
Voltage Range and Output Combinations .....	11-5
<b>Connecting the Field Wiring .....</b>	<b>11-6</b>
Wiring Guidelines .....	11-6
User Power .....	11-6
Supply Requirements .....	11-6
Wiring Diagram .....	11-6
<b>Module Operation .....</b>	<b>11-7</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	11-7
Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	11-8
Understanding .....	11-9
the Output Assignments .....	11-9
Channel Select Outputs .....	11-9
Analog Data Bits .....	11-10
Output Enable .....	11-10
Module Resolution .....	11-10
<b>Writing the Control Program .....</b>	<b>11-11</b>
Calculating the Digital Value .....	11-11
Writing Values: Pointer Method and Multiplexing .....	11-12
Pointer Method Example .....	11-12
Writing Data (Multiplexing) .....	11-14
Writing Data (Multiplexing Example) Continued .....	11-15
Sending Data to One Channel .....	11-16
Analog and Digital Value Conversions .....	11-16

## Chapter 12: F2-02DAS-1 4-20mA 2-Channel Analog Current Output

<b>Module Specifications</b> .....	<b>12-2</b>
Output Specifications .....	12-3
General Specifications .....	12-3
Analog Output Configuration Requirements .....	12-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	12-4
<b>Connecting the Field Wiring</b> .....	<b>12-5</b>
Wiring Guidelines .....	12-5
Loop Power Supply Requirements .....	12-5
Wiring Diagram .....	12-5
<b>Module Operation</b> .....	<b>12-6</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	12-6
Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	12-7
Understanding the Output Assignments .....	12-8
Channel Select .....	12-8
Outputs .....	12-8
Analog Data Bits .....	12-9
Module Resolution .....	12-9
<b>Writing the Control Program</b> .....	<b>12-10</b>
Calculating the Digital Value .....	12-10
Engineering Units Conversion .....	12-10
Reading Values: Pointer Method and Multiplexing .....	12-11
Pointer Method .....	12-11
Writing Data (Multiplexing) .....	12-13
Sending Data to One Channel .....	12-14
Sending the Same Data to Both Channels .....	12-14
Analog and Digital Value Conversions .....	12-15

## Chapter 13: F2-02DAS-2 0-5, 0-10V 2-Channel Isolated Output

<b>Module Specifications</b> .....	<b>13-2</b>
Output Specifications .....	13-3
General Specifications .....	13-3
Analog Output Configuration Requirements .....	13-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	13-4
<b>Setting the Module Jumpers</b> .....	<b>13-5</b>
<b>Connecting the Field Wiring</b> .....	<b>13-6</b>
Wiring Guidelines .....	13-6
Transmitter Power Supply Requirements .....	13-6
Wiring Diagram .....	13-6
<b>Module Operation</b> .....	<b>13-7</b>
Channel Update Sequence for a DL230 CPU (Multiplexing) .....	13-7
Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	13-8
Understanding the Output Assignments .....	13-8
Channel Select .....	13-9
Outputs .....	13-9
Analog Data Bits .....	13-9

Module Resolution .....	13-10
<b>Writing the Control Program .....</b>	<b>13-11</b>
Calculating the Digital Value .....	13-11
Engineering Units Conversion .....	13-11
Reading Values: Pointer Method and Multiplexing .....	13-12
Pointer Method .....	13-12
Writing Data (Multiplexing) .....	13-14
Sending Data to One Channel .....	13-15
Sending the Same Data to Both Channels .....	13-15
Analog and Digital Value Conversions .....	13-16

## **Chapter 14: F2-4AD2DA 4-Ch. In / 2-Ch. Out Combination Analog**

<b>Module Specifications .....</b>	<b>14-2</b>
Input Specifications .....	14-2
Output Specifications .....	14-3
General Module Specifications .....	14-3
Combination Analog Configuration Requirements .....	14-3
Special Placement Requirements (DL230 and Remote I/O Bases) .....	14-4
<b>Connecting the Field Wiring .....</b>	<b>14-5</b>
Wiring Guidelines .....	14-5
User Power Supply Requirements .....	14-5
Current Loop Transmitter Impedance .....	14-6
Wiring Diagram .....	14-7
<b>Module Operation .....</b>	<b>14-8</b>
Input Channel Scanning Sequence for a DL230 CPU (Multiplexing) .....	14-8
Input Channel Scanning Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	14-8
Output Channel Update Sequence for a DL230 CPU (Multiplexing) .....	14-9
Output Channel Update Sequence for a DL240, DL250-1 or DL260 CPU (Pointer Method) .....	14-9
Understanding the I/O Assignments .....	14-10
Input Data Bits .....	14-10
Active Channel Indicator Inputs .....	14-11
Diagnostic Indicator Inputs .....	14-11
Output Data Bits .....	14-11
Output Channel Selection Bits .....	14-12
Module Resolution .....	14-12
<b>Writing the Control Program .....</b>	<b>14-13</b>
Analog Input Power Failure Detection .....	14-13
Calculating the Output Data .....	14-13
Scaling the Input Data .....	14-15
Read / Write Program (Pointer Method) .....	14-16
Reading Input Values (Multiplexing) .....	14-18
Single Input Channel Selected (Multiplexing) .....	14-19
Writing Output Values (Multiplexing) .....	14-19
Sending Data to One Channel (Multiplexing) .....	14-20
Sending the Same Data to Both Channels (Multiplexing) .....	14-20
Analog and Digital Value Conversions .....	14-20
Filtering Input Noise (DL250-1, DL260 CPUs Only) .....	14-21

## Chapter 15: F2-8AD4DA-1 8-Ch. In / 4-Ch. Out Analog Current Combination

<b>Module Specifications</b> .....	<b>15-2</b>
Hardware and Firmware Requirements .....	15-2
Input Specifications .....	15-3
Output Specifications .....	15-4
General Module Specifications .....	15-5
Module Placement and Configuration Requirements .....	15-5
<b>Connecting the Field Wiring</b> .....	<b>15-6</b>
Wiring Guidelines .....	15-6
User Power Supply Requirements .....	15-6
Current Loop Transmitter Impedance .....	15-7
Wiring Diagram .....	15-8
<b>Module Operation</b> .....	<b>15-9</b>
Input Channel Scanning Sequence (Pointer Method) .....	15-9
Output Channel Update Sequence (Pointer Method) .....	15-10
Understanding the I/O Assignments .....	15-11
Input Bits .....	15-12
Output Bits .....	15-12
<b>Special V-Memory Locations</b> .....	<b>15-13</b>
Module Configuration Registers .....	15-13
Number of I/O Channels Enabled & Data Format .....	15-14
Input Resolution Selection Bits .....	15-15
Input Track and Hold Selection Bits .....	15-15
<b>Writing the Control Program</b> .....	<b>15-16</b>
Configuring the Module to Read / Write I/O (Pointer Method) .....	15-16
Module 12 Bit Input Resolution .....	15-20
Module 14 Bit Input Resolution .....	15-20
Module 16 Bit Input Resolution .....	15-20
Analog and Digital Input Data Value Conversion .....	15-21
Input Value Comparisons: Analog, Digital, Engineering Units .....	15-21
Scaling the Input Data .....	15-22
Using the Input Track and Hold Feature .....	15-25
Module 16 Bit Output Resolution .....	15-27
Digital and Analog Output Data Value Conversion .....	15-27
Output Value Comparisons: Analog, Digital, Engineering Units .....	15-27
Calculating the Digital Output Value .....	15-28
Calculating Output Data; Engineering Units Conversion .....	15-28

## Chapter 16: F2-8AD4DA-2 8-Ch. In / 4-Ch. Out Analog Voltage Combination

<b>Module Specifications</b> .....	<b>16-2</b>
Hardware and Firmware Requirements .....	16-2
Input Specifications .....	16-3
Output Specifications .....	16-4
General Module Specifications .....	16-5
Module Placement and Configuration Requirements .....	16-5
<b>Connecting the Field Wiring</b> .....	<b>16-6</b>

Wiring Guidelines .....	16-6
User Power Supply Requirements .....	16-6
Wiring Diagram .....	16-7
<b>Module Operation .....</b>	<b>16-8</b>
Input Channel Scanning Sequence (Pointer Method) .....	16-8
Output Channel Update Sequence (Pointer Method) .....	16-9
Understanding the I/O Assignments .....	16-10
Input Bits .....	16-11
Output Bits .....	16-11
<b>Special V-Memory Locations .....</b>	<b>16-12</b>
Module Configuration Registers .....	16-12
Number of I/O Channels Enabled & Data Format .....	16-13
Input Resolution Selection Bits .....	16-14
Input and Output Range Selection Bits .....	16-14
Input Track and Hold Selection Bits .....	16-15
<b>Writing the Control Program .....</b>	<b>16-16</b>
Configuring the Module to Read / Write I/O (Pointer Method) .....	16-16
Module 12 Bit Input Resolution .....	16-20
Module 14 Bit Input Resolution .....	16-20
Module 16 Bit Input Resolution .....	16-20
Analog and Digital Input Data Value Conversion .....	16-21
Scaling the Input Data .....	16-22
Using the Input Track and Hold Feature .....	16-24
Module 16 Bit Output Resolution .....	16-26
Digital and Analog Output Data Value Conversion .....	16-26
Output Value Comparisons: Analog, Digital, Engineering Units .....	16-26
Calculating the Digital Output Value .....	16-27
Calculating Output Data; Engineering Units Conversion .....	16-27
 <b>Appendix A: DL205 Discrete I/O Memory Map</b>	
<b>X Input / Y Output Bit Map .....</b>	<b>A-2</b>
<b>Control Relay Bit Map .....</b>	<b>A-4</b>
<b>Remote I/O Bit Map (DL 260 only) .....</b>	<b>A-8</b>